

ARK BREASmart BREATHABLE WRAP AD PEEL AND STICK INSTALLATION GUIDE

HORIZONTAL WALL INSTALLATION


Install ARK Breasmart breathable Peel and Stick over an approved exterior sheathing, after the framing is complete and before the windows and doors have been installed. ARK Breasmart breathable Peel and Stick is a self-adhered product and does not require any fasteners during installation. If the windows and doors have already been installed, trim the ARK Breasmart breathable Peel and Stick close to the window frame and flash according to the ARK flashing instructions.

All installation procedures and techniques must comply with local code requirements and the latest version of ASTM 2112.

Installation methods approved by the American Architectural Manufacturers Association (AAMA) are acceptable for ARK products and the ATK Weather Protection System Lifetime Limited Warranty.*


STEP 1

Prepare the sheathing to be clean of dust and debris. For best practices, establish “level line” to use as a guide for top edge of ARK Breasmart Peel and Stick. Follow this level line as you roll out course to minimize wrinkles and ensure maximum adhesion to sheathing. ARK Breasmart Peel and Stick is comprised of an acrylic adhesive, and can be repositioned on sheathing to ensure a smooth, wrinkle-free application; however, ensure that the adhesive does not make contact with itself.

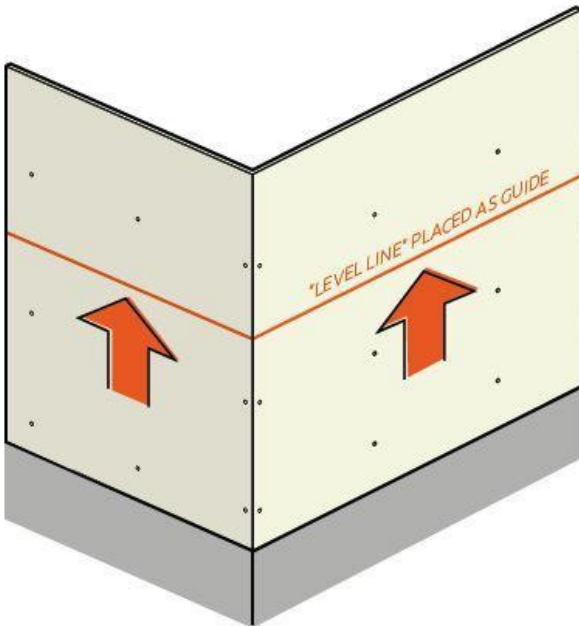


Start at the bottom of one end of the wall with the side without fiber facing up. When starting at a corner, overlap by a minimum of 6" (152 mm). A minimum of a 1" (25.4 mm) overlap on the sill plate is required; however, for maximum protection, a 2"-4" (51-102 mm) overlap on

the sill plate is recommended.

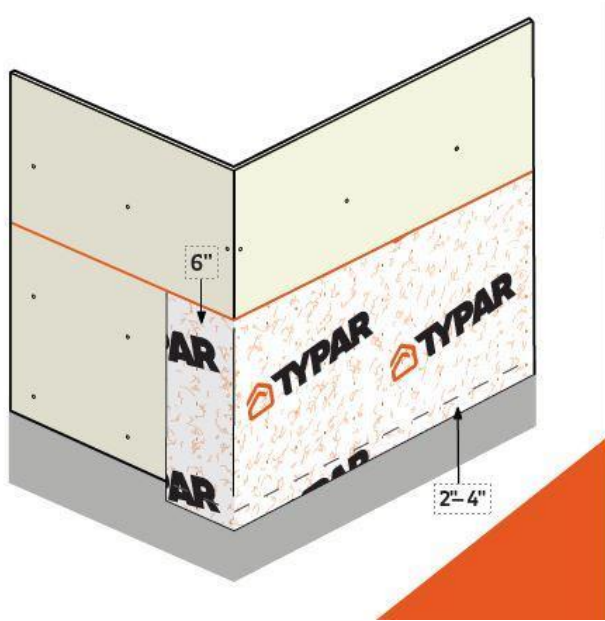

STEP 2

Peel single release liner from ARK Breasmart Peel and Stick and align the top of the membrane to level line. You may fasten the exposed corner with a plastic cap fastener to hold membrane in place as you continue to the next step. Press roll firmly into place on sheathing using hand pressure, with pressure applied first in middle of roll and working toward outer edges, removing any wrinkles and air bubbles in the process.

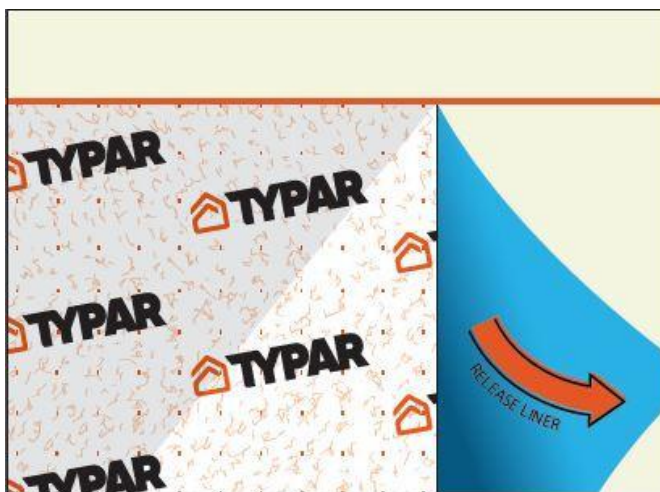


STEP 3

Continue unwinding roll, removing release liner and repeating hand pressure application until course is firmly applied to sheathing. For best practices, use a J-roller or other application tool to ensure any remaining wrinkles and air bubbles are removed from the course.



STEP 4

Repeat steps (2) and (3) for consecutive rolls, ensuring courses are applied in shingle lap fashion to properly shed water. Recommended overlap for horizontal and vertical applications is 4"-6" (102-152 mm). Use of ARK Breasmart Tape on horizontal and vertical Seams are optional.

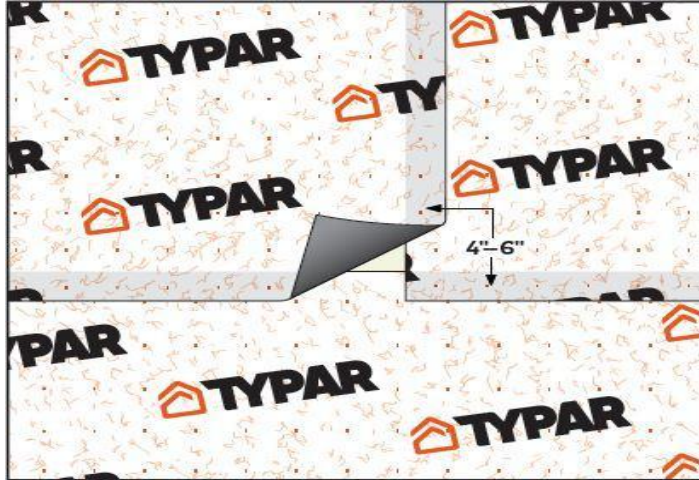

STEP 5

After the installation is complete, and before the exterior cladding is installed, inspect the ARK Breasmart Peel and Stick for tears.

Repair the issues with ARK Breasmart Construction Tape or ARK Breasmart flashing.